



Remedy

Open isolation valve.

Increase water flow rate or pressure through system.

Refer to specification for minimum distance required.

Do not use other water outlets when using the taps.

Flush through pipework to ensure removal of debris and any airlocks.

This is caused by residual water tension, the build up of water in the tap body.

Remove valves and clean, refer to 'Maintenance'

section before starting any maintenance.

Open isolation valve.

Turn on mains water supply.

## **Contact Us**

## Bristan Group Ltd.

UK: Heritage Bathrooms, B78 ISG. EU: Masco Europe S.à.r.l. 14 Rue Strachen 6933 Mensdorf Luxembourg

Customer Service: +44330 026 8503 Web: www.heritagebathrooms.com Email: enquire@heritagebathrooms.com

## A Masco Company

