

# HERITAGE

## BATHROOMS

### *Installation Guide*



Models covered:

**Freestanding Furniture &  
Wall Hung Cabinet**

Please keep this booklet for future  
Reference.

Installer: when you have read these  
instructions please ensure you leave them  
with the user.



---

## Introduction



---

Thank you for buying a Heritage Product. When you buy a Heritage product, you can be confident that it not only features a beautiful, distinctive, classic design, but that it has also been made to the very highest quality standards. To ensure that it works to its full potential, it needs to be fitted correctly.

These fitting instructions have been created to give you all of the information you need and, if you need any further help, please do not hesitate to give us a call on 0844 701 8503.

---

## Contents



---

Safety Notice .....	3
Installer Guidelines .....	3
Tools Required .....	3
Installation .....	4-8
Shelf Positioning .....	9
Adjustment of Doors .....	9
Caring for your product .....	10
Guarantee .....	10
Notes .....	11

---

## Safety Note

---

Please read these instructions and retain for future use.

All products manufactured and supplied by Heritage are safe, provided they are installed correctly, used correctly, and receive regular maintenance in accordance with these instructions.

If you are in any doubt about your ability to install this product safely you must employ the services of a competent person who has experience of fitting products of this nature.

⚠ Before starting any installation project please consider the following:

- Prior to drilling into walls, check there are no hidden electrical wires or cables or water supply pipes with the aid of an electrical detector.
  - If you use power tools do not forget:
    - Wear eye protection.
    - Unplug equipment after use.
  - This product must not be modified in any way as this will invalidate the guarantee.
- 

## Installer Guidelines

---

The furniture in this booklet comes mostly assembled. Shelves will need to be installed once furniture is in position and fixed.


Wall Cabinets will need to be fitted on solid walls capable of some load bearing.

The installation of these products greatly depends on the floor and wall being level. If this is not the case, it must be corrected before installation.

---


## Tools Required

---

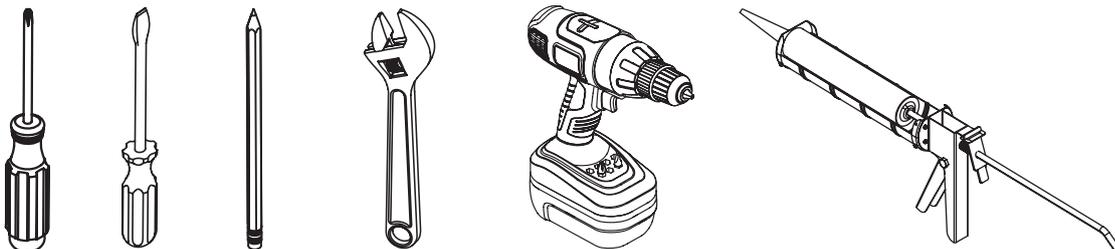


# Installation of Vanity Units

1

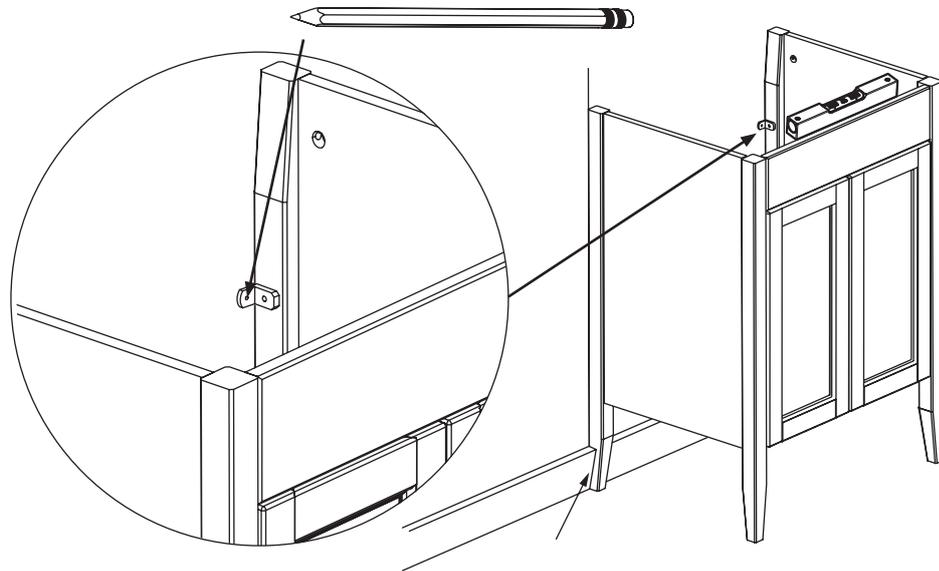

We recommend that you secure the unit to the wall using angled brackets (not supplied). Position the cabinet in your required location checking the alignment with a spirit level and mark the wall through the holes in the angled brackets. Make sure you removed required skirting boards before fixing. It is best to install the angled brackets on the inside of the freestanding furniture.

2

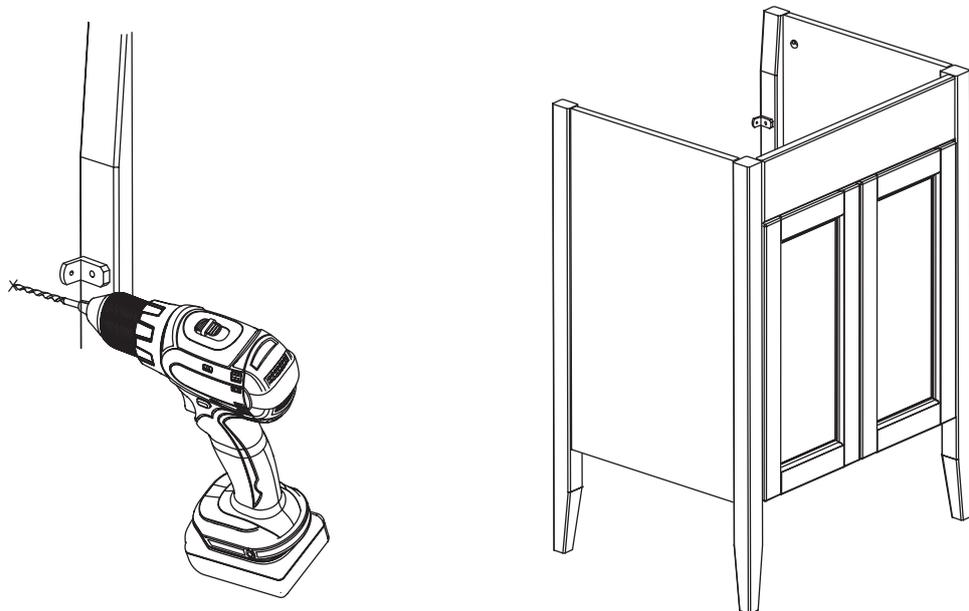


Remove the cabinet and drill holes of the appropriate size to accept the necessary screws or wall plugs used to secure. Lift the cabinet back into position and screw to the wall.

**⚠ Make sure you use screws which are shorter length than the thickness of the wood on the freestanding furniture otherwise you may drill through the unit by mistake and cause irreparable damage.**

# Installation of Vanity Units




3

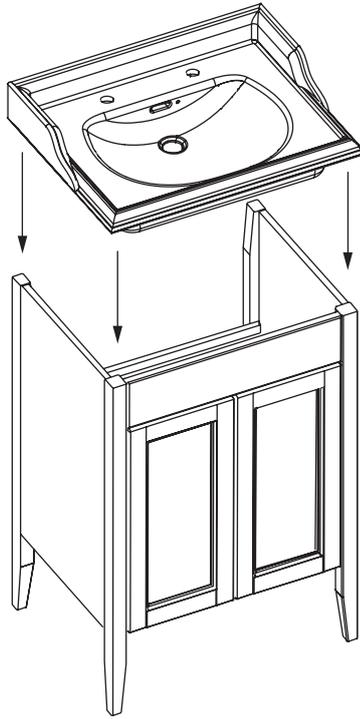

Locate the basin so it is evenly flush with the edges and firmly against the rear wall. Fasten basin to the wall using screws (not supplied) or bolts (supplied, if applicable). The holes for these can be seen on the rear of the basin.


4

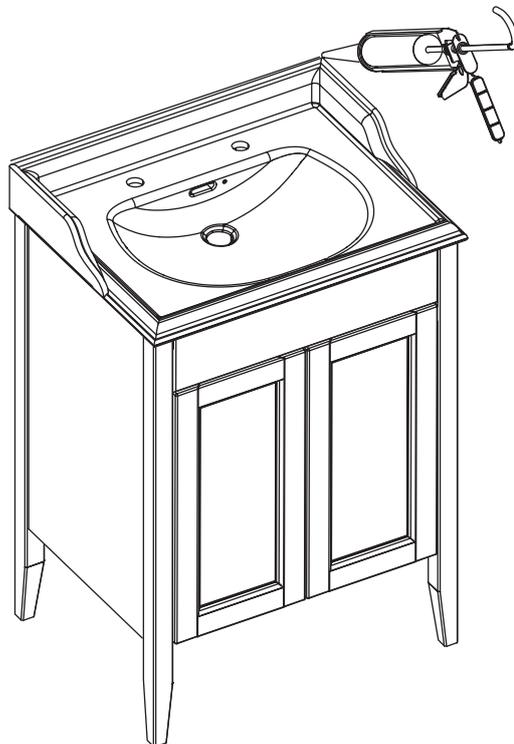

Once basin is fixed to the wall, run a bead of silicon around the joint between the basin and the vanity unit, this will ensure the furniture is sealed from water. Handles should be fitted by referring to accompanying instructions.


# Installation of Wall Cabinets

1

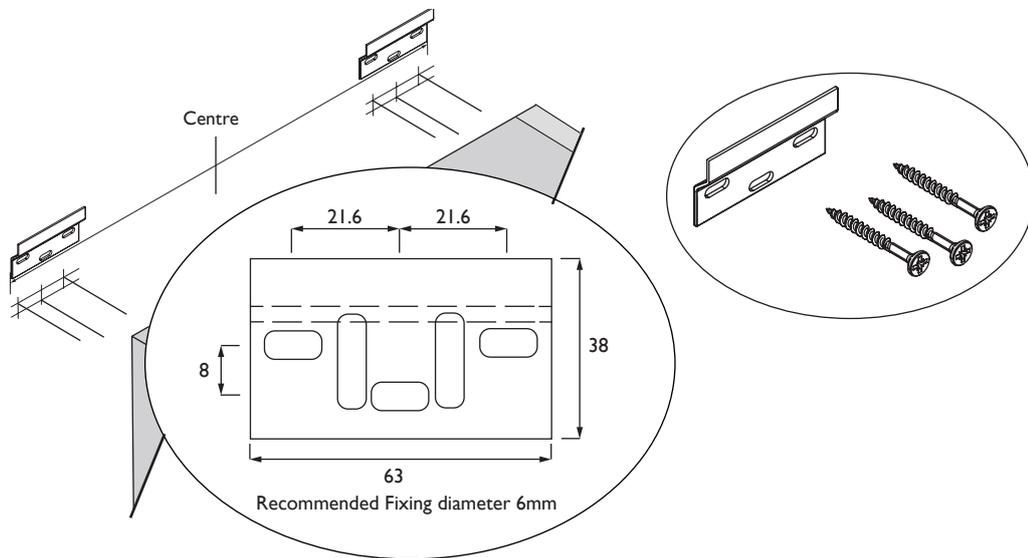

Determine favoured position of cabinet and mark a vertical centre point on the wall. Measure the span of the pre-fitted brackets and transfer measurement to wall measurement out from centre point to give a central position for the cabinet. Fit the wall plates using appropriate fixings (not supplied) using a long spirit level to make sure levelling is accurate. Plates should be no more wide apart than the spanned measurement of the wall hanging brackets.

2

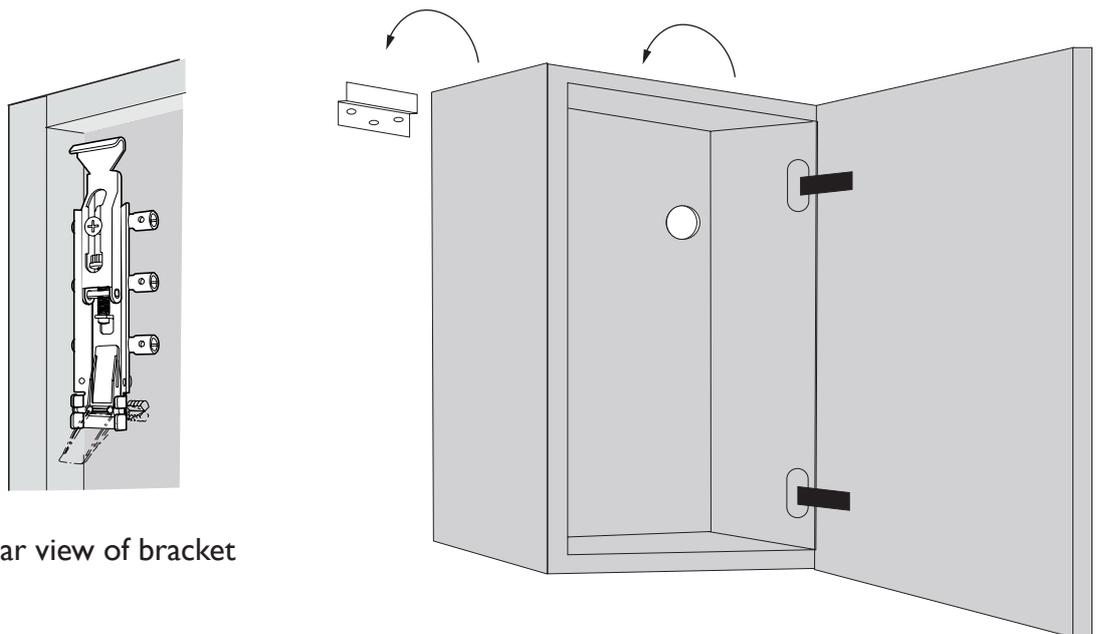


Rear view of bracket

The hanging brackets are already secured to the cabinet, so you are able to hang cabinet in position on wall plates by adjusting the plate to allow enough of the hanger to protrude and hook onto the plate.

# Installation of Wall Cabinets



3

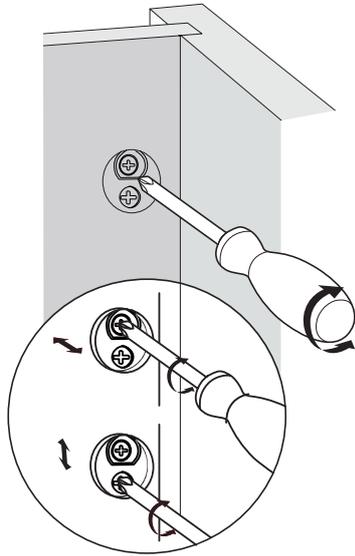


Vertical and horizontal adjustments



Cabinet hangers should only be adjusted with a hand tool and not a power tool

Turn the top adjustment screw to adjust the unit from front to back. Allows unit to tilt forwards or backwards from the wall. Insert screwdriver into hole below the top screw and turn to move unit up and down, adjust unit for height. By adjusting at both sides the unit can be levelled.


4

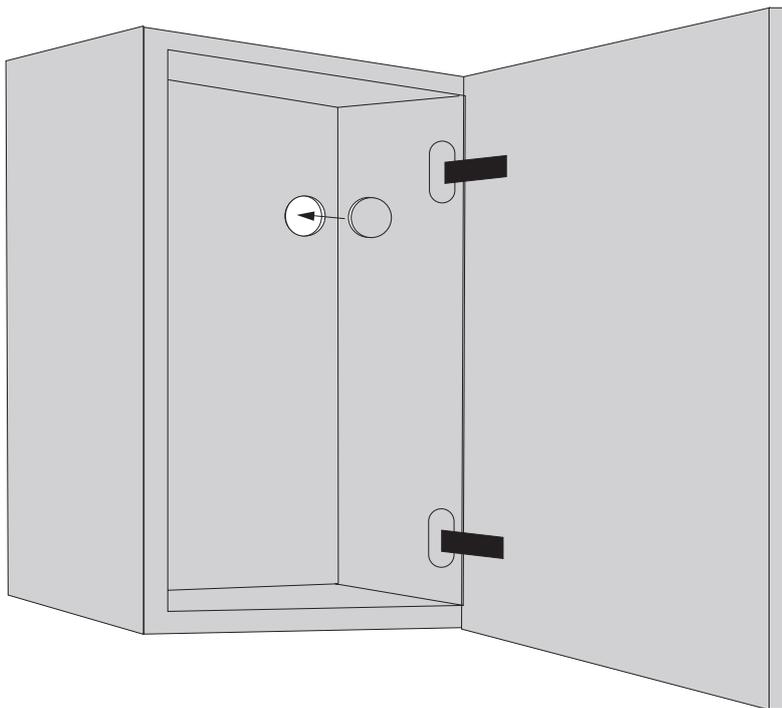

Once adjustment has been completed, the covering cap can be pressed on, to conceal the hole.

# Installation of Tall Boy Units or Small Storage Units


1

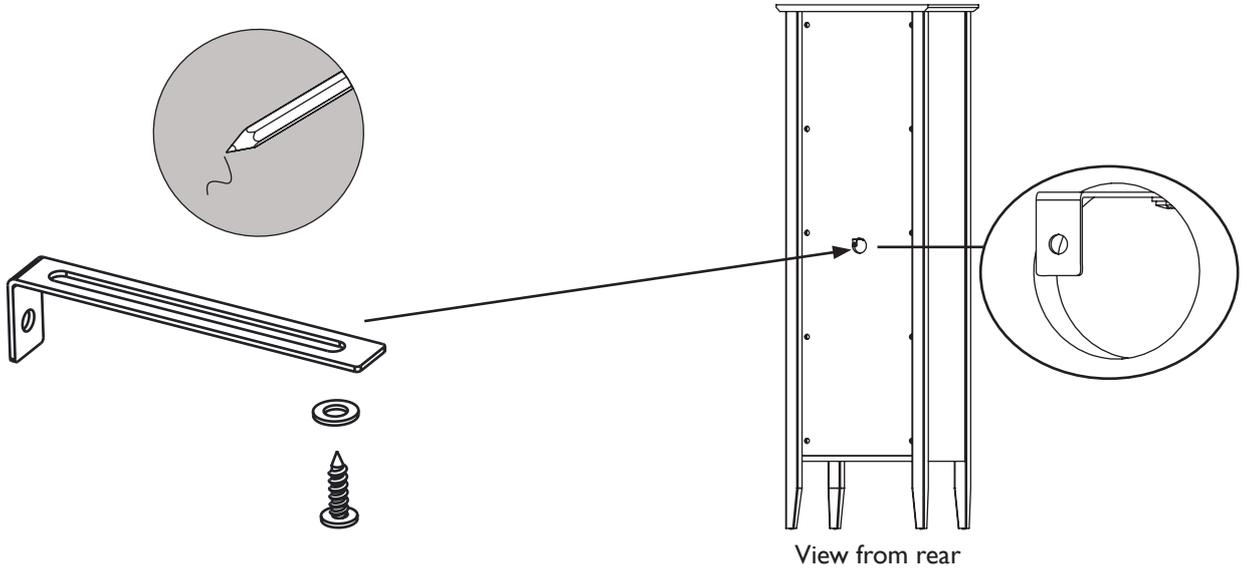

Tall boy units can be attached to the wall using the shown security bracket. There is a purpose access hole drilled for this on the lower part of the unit, use the provided screw and washer to attach the bracket to the unit.

Note: Ensure you orientate the bracket as shown in the illustration.

2

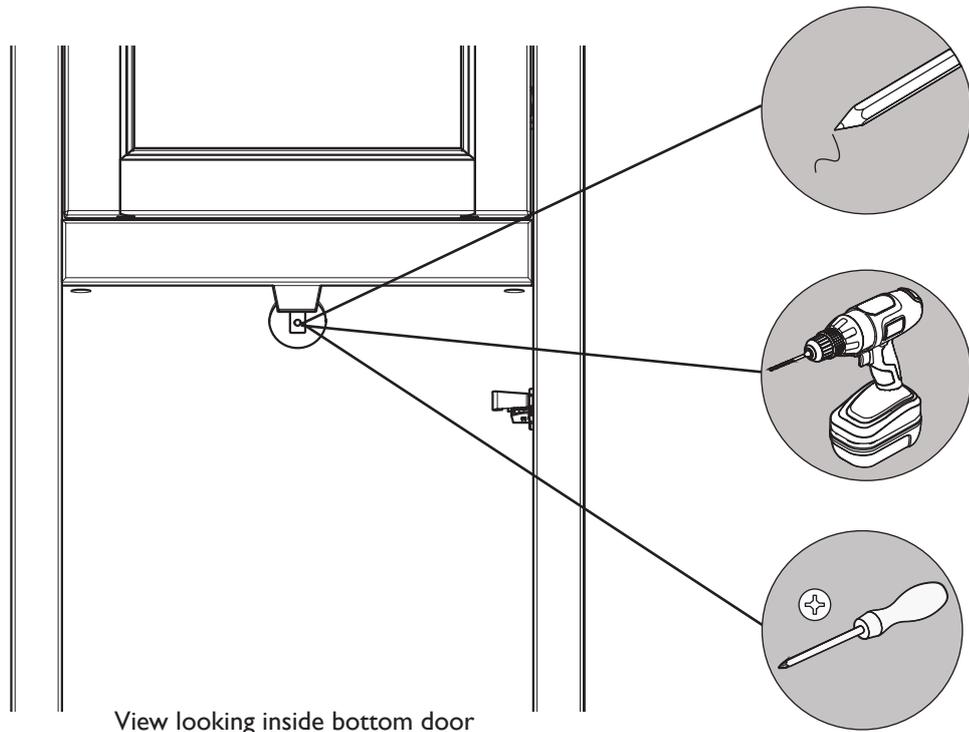


Mark the required hole using the bracket hole as a template. Drill a suitable hole for the wall fixings used (not supplied). Attach the bracket to the wall.

---

## Shelf Positioning

---

Push the shelf dowels into pre-drilled holes. Offer shelf into cabinet at an angle, allowing positioning and lower into place.

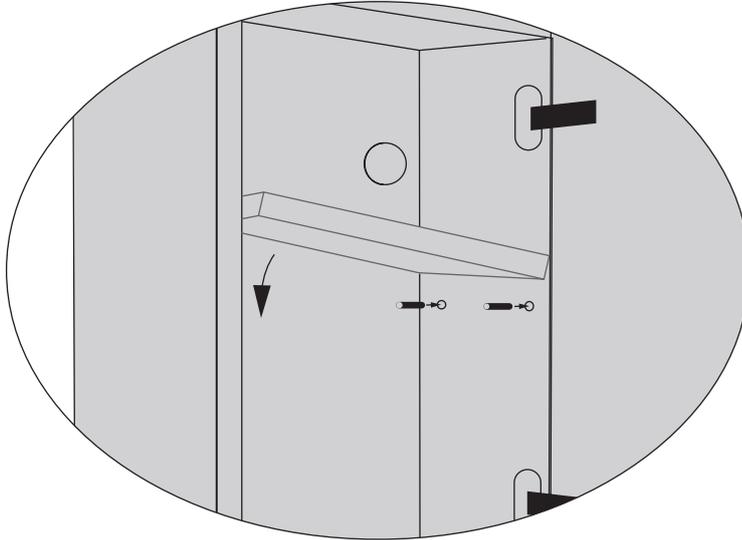


---

## Adjustment of doors

---

All hinges for the cabinets are already installed but may need adjustment to line up the door to the frame.

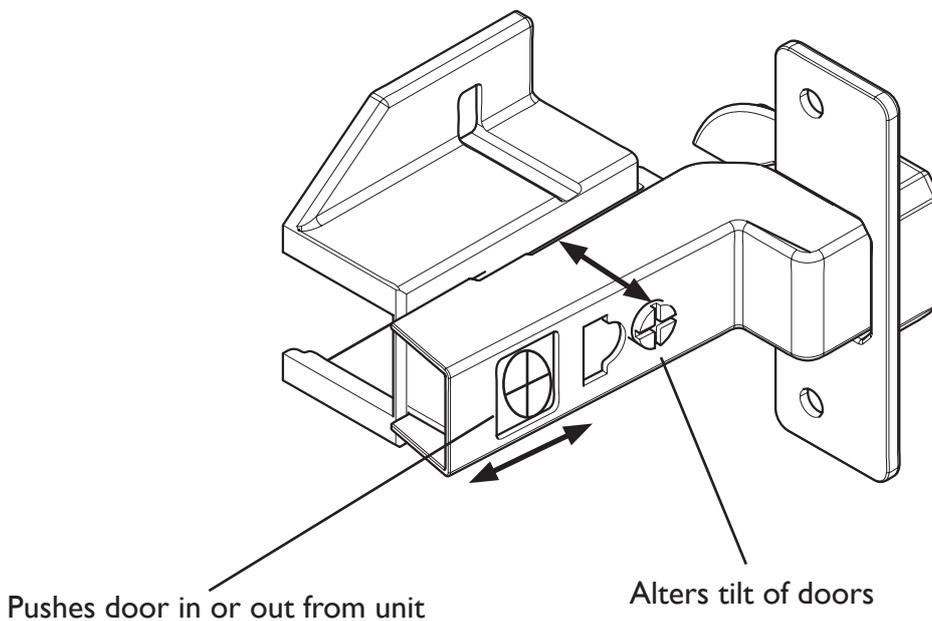

---

## *Caring for your product*

---

Your fitting has a high quality finish and should be treated with care to preserve the visible surface.

A few tips for preventing defects from forming:

Occasionally wipe the surface with a soft damp cloth and dry with a soft dry cloth.

Do not use any abrasive cleaning agents or materials, these will change the surface condition from the standard finish.

---

## *Guarantee*

---

The confidence we have in the quality of our products and services enables us to offer a free peace-of-mind product guarantee from 2 years up to a lifetime guarantee against any manufacturing faults, with proof of purchase. In addition, our attentive customer service team are available to help solve any problems which may arise quickly and effectively so you can enjoy your bathroom.



To see the specific guarantee for this product, visit the following URL or QR Code.

<http://www.heritagebathrooms.com/service-centre/guarantee>

---

*Notes*





# HERITAGE<sup>®</sup>

## BATHROOMS

---

### *Contact Details*

---

Heritage Bathrooms  
Birch Coppice Business Park  
Dordon  
Tamworth  
B78 1SG

Website: [www.heritagebathrooms.com](http://www.heritagebathrooms.com)  
Customer Services Telephone: 0330 026 8503  
Email: [technical@heritagebathrooms.com](mailto:technical@heritagebathrooms.com)

Freestanding Furniture - D4