

HERITAGE

BATHROOMS

Ball and Claw Bath Feet Installation Instructions

This installation instruction accompanies the feet of your new bath. You must read the pre-installation notes in the bathtub fitting instructions before attempting to install these feet on the bathtub.


Before you begin:

Caution: Risk of Personal injury or product damage, cast iron bathtubs are very heavy, be careful and also get help when it comes to lifting up the bathtub. You may also need help for baths made of Acrylic as they can be tricky to manoeuvre. To ensure that this product is installed correctly, please read the following instructions very carefully, before the installation of the actual bathtub, the enamel can be severely damaged.

We strongly advised that this product should be installed by a competent person who has experience in installing product of this nature.

Tools required: Adjustable spanner and Protective Sheet

No	Item Description
1	Fixing Brackets
2	Chrome Plated Ball and Claw Feet
3	Bolts
4	Washers
5	Adjustable Feet

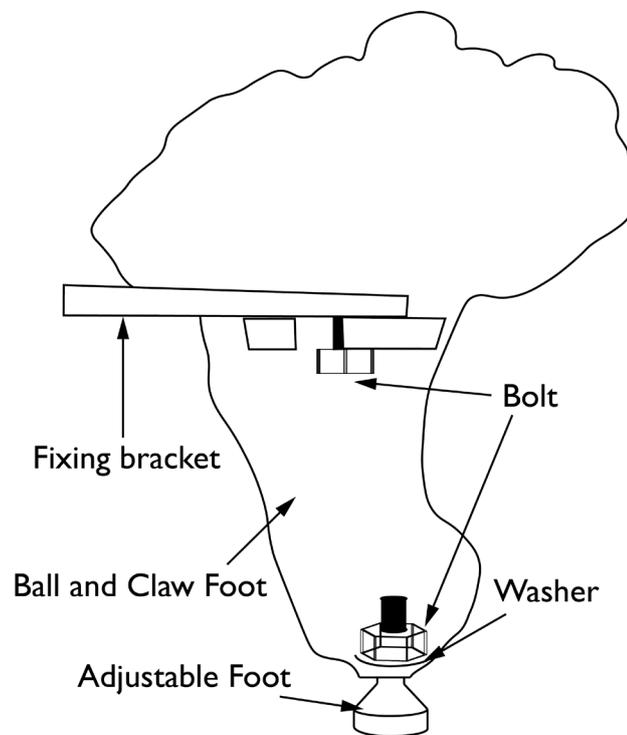

Installation

1. Attach the brackets, Item 1, to the base of the bath and secure with nuts and washers supplied with bath. Be careful that the brackets are orientated correctly according to their bend.
2. Align the feet, Item 2, with the location holes in the fixing brackets and secure with the bolts and washers, Items 3 and 4.
3. If applicable, Modern or Dragon Foot Design, screw adjustable Feet – Item 5, into the bracket.
4. Adjust the Feet on all designs to align the bath and secure in position by tightening the locknut.

Guarantee/Aftercare - This product is covered under the aftercare/guarantee sections shown in the Footed Bath Installation Instructions which accompany your bath.