

HERITAGE

BATHROOMS

Installation Guide



Models Covered:

Pop-Up Bath Waste

THAI4
THBBI4
THBLI4
THBNI4
THCI4

Please keep this booklet for future reference.


Installer: When you have read these instructions, please ensure you leave them with the user.

INSTALLATION

Identify all components are present prior to installation.

Components

1. Overflow Body
2. A - Grey Overflow Washer for 5-15mm thick baths
B - Black Overflow Washer for <5mm thick baths
3. Locking Nut
4. Overflow Face/Control
5. Overflow Screw
6. Plug
7. Plug Seal
8. Nut
9. Adjusting Screw
10. Overflow Pipe
11. Waste Screw
12. Flange
13. Waste Seal
14. Waste Body

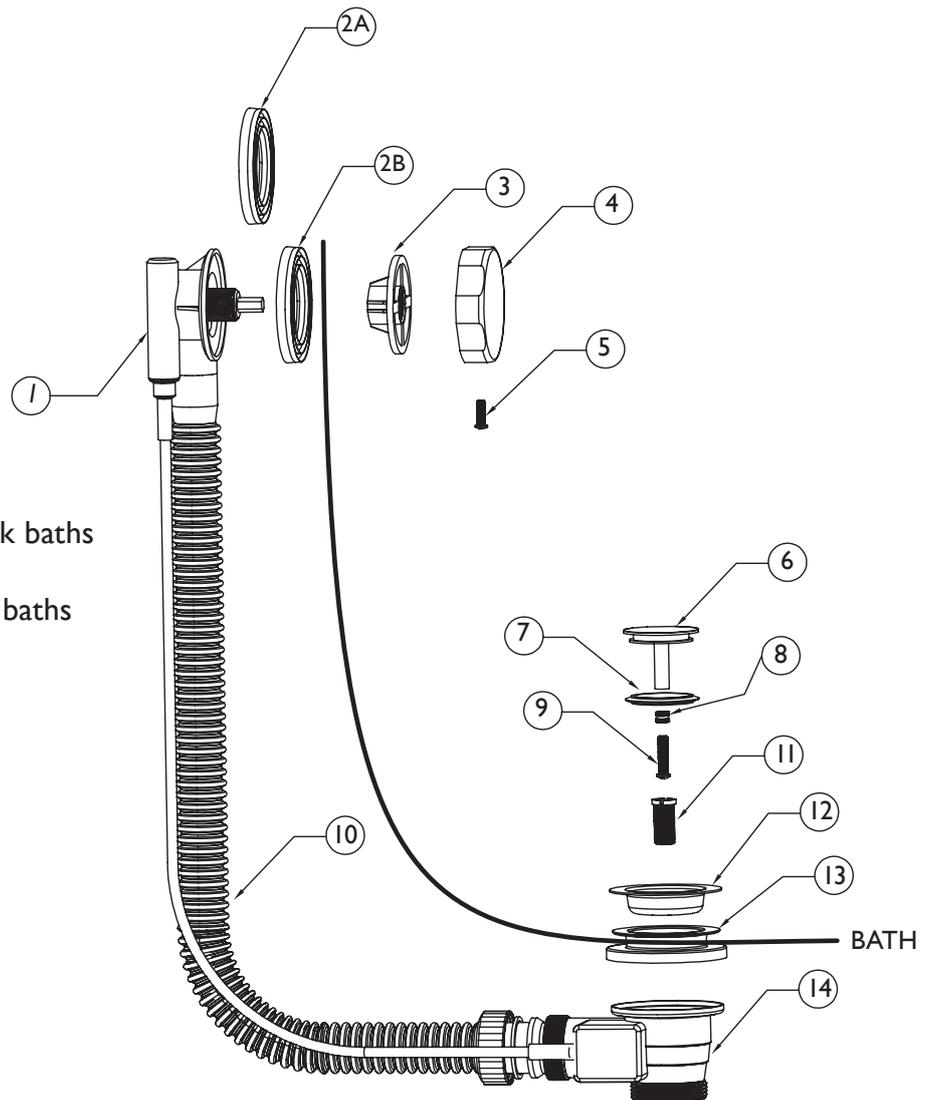

INSTALLATION

1. Fit the overflow pipe (10) onto the connections on the waste body (14) and overflow body (1). Use a WRAS approved silicon sealant where necessary.
2. Push the waste seal (13) through the bath hole, ensuring all edges are flat to the surface of the bath.
3. Place the waste body (14) under the bath, and the flange (12) above the bath. Screw the waste screw (11) into the flange to secure the waste body (14) in place.
4. Place the overflow body (1) and overflow washer (2) behind the bath. Depending on the thickness of your bath, use the grey overflow washer (2A) if the bath is 5-15mm thick, or the black overflow washer (2B) if the bath is less than 5mm thick.
5. Secure the overflow body using the locking nut (3). Place the overflow face (4) over the locking nut and secure in place with the overflow screw (5).
6. To assemble the plug (6), Fit the nut (8) onto the adjusting screw (9) and fit to the plug (6).
7. Turn the overflow face (4) to pop-up the plug. Check that the plug pops up sufficiently. If adjustment is needed, set the plug in the closed/lowered position.
8. Unscrew the nut (8). Screw/unscrew the adjusting screw (9) in the plug so that it is almost touching the operating lever inside the waste body (14). Repeat step 7. Tighten the nut (8) if the plug operates correctly.
9. Check all joints & connections for any leaks.

CARING FOR YOUR PRODUCT

Heritage products are made from premium materials, with hand polishing, PVD, EPD and electroplated finishes.

Your product should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toiletries etc. should be rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Some surfaces such as nickel and pewter may be affected by the dye found in some cloths, so it is also important to avoid leaving cloths on surfaces.



GUARANTEE

The confidence we have in the quality of our products and services enables us to offer a free peace-of-mind product guarantee from 2 years up to a lifetime guarantee against any manufacturing faults, with proof of purchase. In addition, our attentive customer service team are available to help solve any problems which may arise quickly and effectively so you can enjoy your bathroom.

To see the specific guarantee for this product, scan the QR Code

or visit the following URL:

<http://www.heritagebathrooms.com/service-centre/guarantee>



NEED HELP?

In the unlikely event that you encounter a problem with your Heritage product, you must, in the first instance, contact the retailer you purchased it from. They will advise as to whether it is due to a manufacturing fault or an installation fault. If the problem is due to a manufacturing fault, they will contact us to arrange a supply of a replacement product as soon as possible. To speak to a Heritage customer service advisor, please contact our technical helpline on 0330 026 8503.



NOTES



NOTES



NOTES



HERITAGE[®]

BATHROOMS

We love to see how Heritage products are used so please keep in touch and share pictures of your new bathroom with us.



@heritagebathrooms

If you have any queries, our dedicated customer service teams and products experts are available to help.

Email us enquire@heritagebathrooms.com Call us **0330 026 8503** Website www.heritagebathrooms.com

UK: Heritage Bathrooms, Pooley Hall Drive, Birch Coppice Business Park, Dordon, Tamworth B78 1SG

EU: Masco Europe S.à.r.l., 14 Rue Strachen, 6933 Mensdorf, Luxembourg.