

HERITAGE

BATHROOMS

Bath Feet Installation Instructions

This installation instruction accompanies the feet of your new bath. You must read the pre-installation notes in the bathtub fitting instructions before attempting to install these feet on the bathtub.

Before you begin:

Caution: Risk of Personal injury or product damage, cast iron bathtubs are very heavy, be careful and also get help when it comes to lifting up the bathtub. You may also need help for baths made of Acrylic as they can be tricky to manoeuvre.


To ensure that this product is installed correctly, please read the following instructions very carefully, before the installation of the actual bathtub, the enamel can be severely damaged.

We strongly advised that this product should be installed by a competent person who has experience in installing product of this nature.

Recommended Tool and Materials:-


Adjustable spanner and Protective Sheet

1

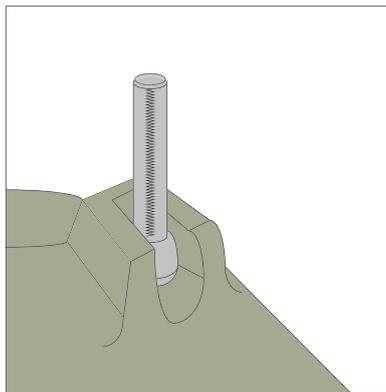


Turn the bathtub upside down on a cardboard sheet and insert the four bolts supplied in the lugs

2

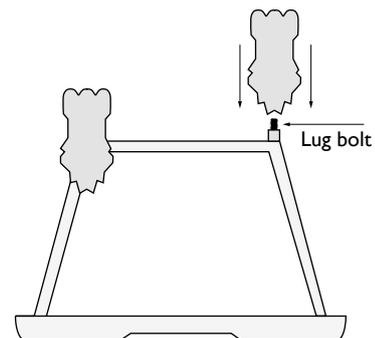

Place each of the four feet over the lugs so the bolt is positioned through the hole

3

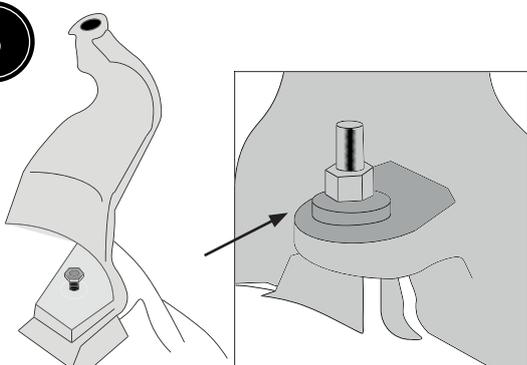

Tighten the nuts on the lug bolt until the leg is firmly secured and tighten with a spanner.

4



The bath can be positioned up the correct way. The legs can be adjusted to help with slightly uneven floors

Guarantee/Aftercare - This product is covered under the aftercare/guarantee sections shown in the Footed Bath Installation Instructions which accompany your bath.