

Installation Guide




Models covered:


Bath/Shower Screen


Please keep this booklet for future reference.

Installer: When you have read these instructions, please ensure you leave them with the user.

Installation

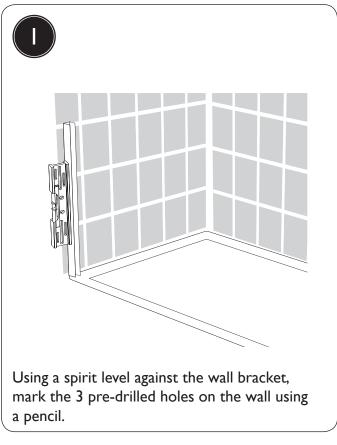


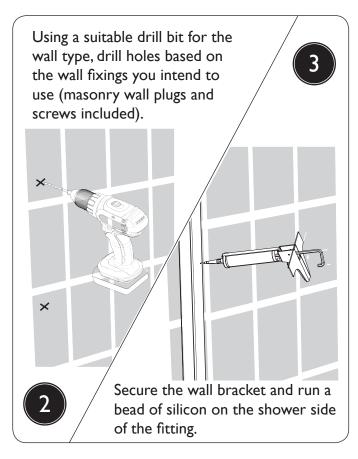

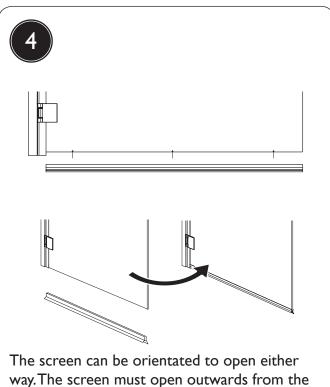

bath. Once the bottom of the screen is

determined, fit the sealing strip.

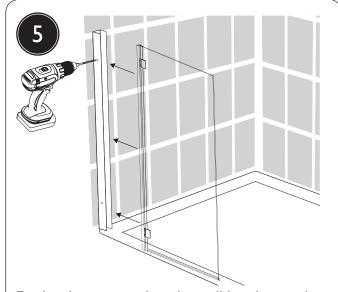

Fit the shower panel to the wall bracket so that the sealing strip on the base rests enough to create a seal but light enough to move. Using the drill bit provided drill two holes. Place the provided cover housing over the holes and secure using screws provided. Use the provided caps to hide the screw heads.

Caring for your product

Your fitting has a high quality finish and should be treated with care to preserve the surface.

- · All surface finishes will wear if not cleaned correctly.
- The only safe way to clean your product is to wipe with a soft damp cloth. Any stains can be removed using washing up liquid.
- Do not use cleaning powders or liquids.
- Even non-scratch cleaners may damage the surface of your fitting.

Guarantee



The confidence we have in the quality of our products and services enables us to offer a free peace-of-mind product guarantee from 2 years up to a lifetime guarantee against any manufacturing faults, with proof of purchase. In addition, our attentive customer service team are available to help solve any problems which may arise quickly and effectively so you can enjoy your bathroom.

To see the specific guarantee for this product, visit the following URL or QR Code. https://www.heritagebathrooms.com/service-centre/guarantee





Contact Details

Heritage Bathrooms

Birch Coppice Business Park

Dordon

Tamworth

B78 ISG

Website: www.heritagebathrooms.com

Customer Services Telephone: 0330 026 8503

Email: enquire@heritagebathrooms.com

Bath/Shower Screen D2