

# HERITAGE

## BATHROOMS



### INSTALLATION GUIDE

#### MODELS COVERED:

Bath Panel

Please keep this booklet for future reference.

Installer: When you have read these instructions please ensure you leave them with the user.

---

# INTRODUCTION



---

Thank you for buying a Heritage Product. When you buy a Heritage product, you can be confident that it not only features a beautiful, distinctive, classic design, but that it has also been made to the very highest quality standards.

To ensure that it works to its full potential, it needs to be fitted correctly.

These fitting instructions have been created to give you all of the information you need and, if you need any further help, please do not hesitate to give us a call on: **0330 026 8503**.

---

# CONTENTS



---

Safety Notice .....	3
Installer Guidelines .....	3
Installation .....	4-5
Caring for your product .....	6
Guarantee .....	6

---

# SAFTEY NOTES



---

Please read these instructions and retain for future use.

All products manufactured and supplied by Heritage are safe, provided they are installed correctly, used correctly, and receive regular maintenance in accordance with these instructions.

If you are in any doubt about your ability to install this product safely you must employ the services of a competent person who has experience of fitting products of this nature.

- Prior to drilling into walls, check there are no hidden electrical wires, cables or water supply pipes with the aid of an electrical detector.
- If you use power tools do not forget PPE:
  - Wear eye protection.
  - Unplug equipment after use.
- Keep electrical equipment away from sources of water.
- This product must not be modified in any way as this will invalidate the guarantee.
- Basins, including the connecting water and waste system need to be installed in accordance with [BS 6841](#) and meet the requirements of the water supply regulations 1999 (Water Fittings) and Scottish By-Laws 2004.
- If a blow lamp is used when plumbing, the flame must be kept away from the furniture otherwise damage may occur.
- All units should be assembled and fitted using instructions and installation guidelines provided. Any screws and other fixings used must be suitable for the installation situation. (Brick, Block, Plaster or Dot & Dab)

---

# INSTALLER GUIDELINES



---

The furniture in this booklet comes mostly assembled.

Things to assemble bath panel and plinth



The installation of this product greatly depends on the floor being level. If this is not the case, it must be corrected before installation.

# INSTALLATION



1. Measure the distance from under the lip of the bath to the floor using a tape measure. This must be done at both ends of the length of the bath (longest side). Record the measurements.
2. Measure the thickness of the bath panel and mark the thickness under the bath lip. This measurement is required for stage 3. You may wish to add on the thickness of the fixing used to hold the panel in position. The panel must sit flush or slightly indented to the bath lip.
3. Create a framework which is used to attach the bath panel and plinth to. The framework shown in Fig.2 must be positioned so when the bath panel is seated, it fits correctly. 25mm timber is suitable for this purpose and can be fixed to the surrounding wall using suitable fixings for the wall type. Create the framework whilst also making sure access to the plumbing fixtures on the bath is available.

## SIDE ON VIEW

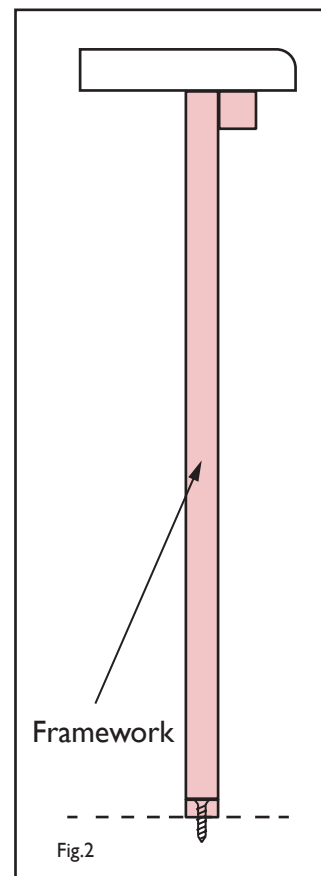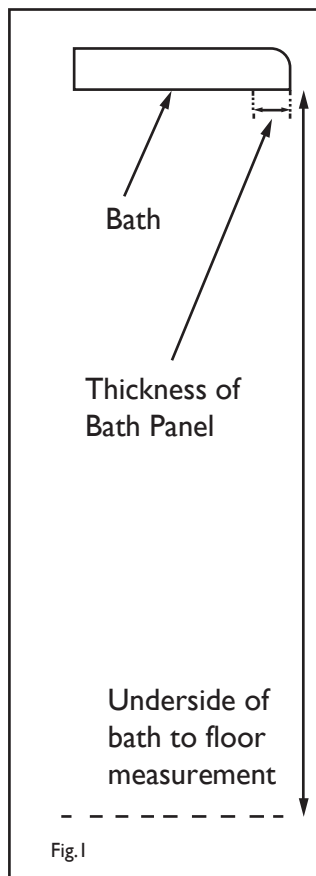



# INSTALLATION



4. Using the measurements obtained in stage 1, connect the plinth to the bath panel using screws with a suitable length (not supplied). The combined height of both plinth and bath panel must not exceed the measurement between the underside of bath to floor as obtained in step-1, the layout of the connection can be seen in Fig.3.

5. There are several methods to connecting the bath panel to the framework (as seen in Fig.4). Bear in mind that future access will be required to the plumbing fixtures, so it may be an idea to use a magnetic fixing idea when the bath panel and plinth to the framework. Magnetic fixing kits, tape or even velcro fixing kits can be obtained at most hardware stores. Alternative you can use screws and drill into the bath panel and through to the frame. Securing with suitable screws and decorative screw covers.

## SIDE ON VIEW

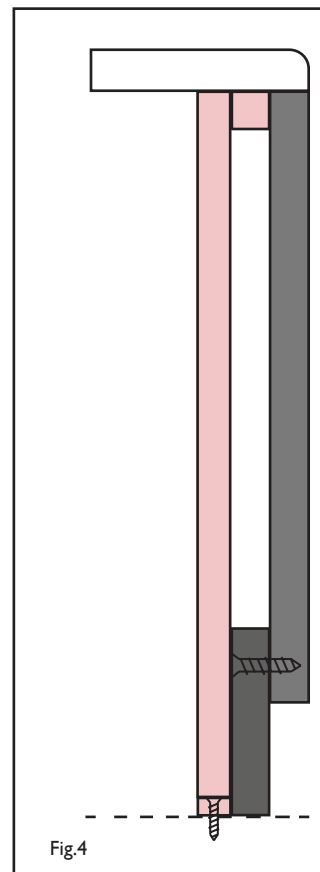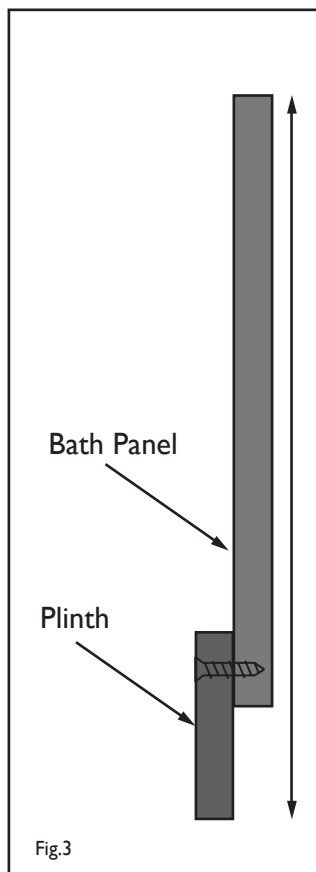

---

## CARING FOR YOUR PRODUCT



---

Your fitting has a high quality finish and should be treated with care to preserve the surface.

- All surface finishes will wear if not cleaned correctly.
- The only safe way to clean your product is to wipe with a soft damp cloth. Any stains can be removed using washing up liquid.
- Do not use cleaning powders or liquids.
- Even non-scratch cleaners may damage the surface of your fittings.
- Avoid products or liquids that are likely to stain, clean any spills immediately.

---

## GUARANTEE



---

The confidence we have in the quality of our products and services enables us to offer a free peace-of-mind product guarantee from 2 years up to a lifetime guarantee against any manufacturing faults, with proof of purchase. In addition, our attentive customer service team are available to help solve any problems which may arise quickly and effectively so you can enjoy your bathroom.



To see the specific guarantee for this product, visit the following URL or QR Code.

<https://www.heritagebathrooms.com/service-centre/guarantee>

---

# NOTES



# HERITAGE<sup>®</sup>

## BATHROOMS

We love to see how Heritage products are used so please keep in touch and share pictures of your new bathroom with us.



@heritagebathrooms

**If you have any queries, our dedicated customer service teams and products experts are available to help.**

**Email us [enquire@heritagebathrooms.com](mailto:enquire@heritagebathrooms.com) Call us 0330 026 8503 Website [www.heritagebathrooms.com](http://www.heritagebathrooms.com)**

Heritage Bathrooms Pooley Hall Drive, Birch Coppice Business Park, Dordon, Tamworth B78 1SG